


B.E.G. LUXOMAT® SCT1


Installation and Operating Instruction for B.E.G. - Staircase Timer SCT1

1. Installation

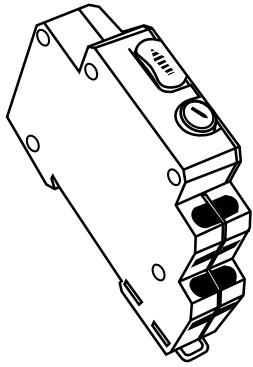


Provided for DIN-rail mounting.

2. Dimensions

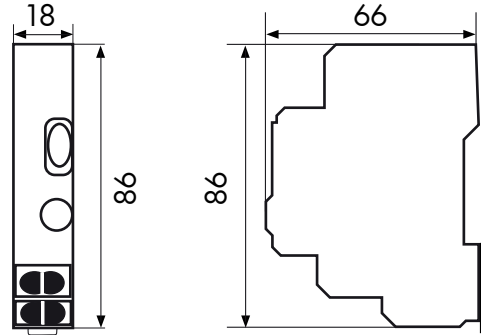


3. Wiring diagram

Switching with push button 3-wires

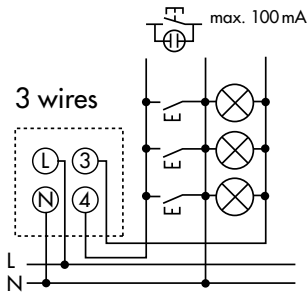


Switching with push button 4-wires

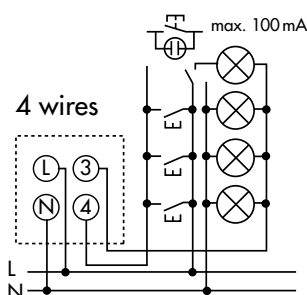


Also suitable for connection to the B.E.G. LUXOMAT® Indoor 180-SC. Possible expansion of detection area with a maximum of 10 detectors.


Switching with Indoor 180-SC 3-wires

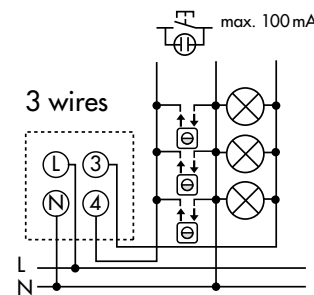

Switching with Indoor 180-SC 4-wires

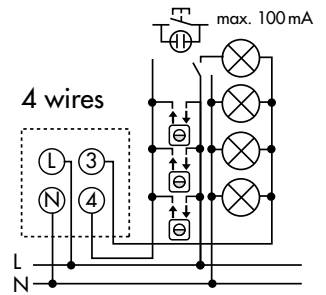



4. Putting into operation / Settings

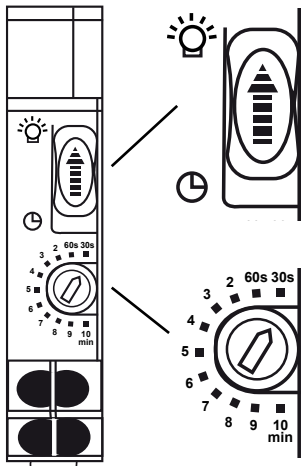

Light-connection
 manual
 time controlled

Follow-up time for light control
 The time can be set infinitely variably at between 30 seconds and 10 minutes.

5. Adjustment of the switch-off pre-warning

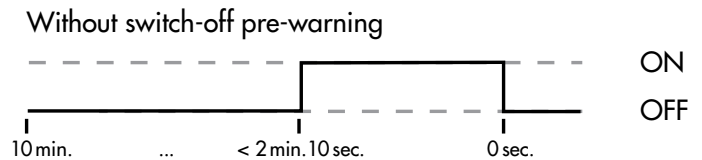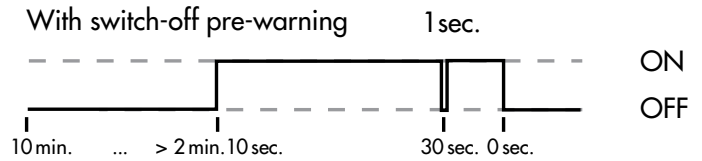

The switch-off pre-warning starts from time settings > 2 min. 10 sec. only.

6. Technical data

Power supply	AC 230V ± 10%, 50-60 Hz
Switching power	2300 W/10 A cos(φ) = 1
Time-settings	30 sec. - 10 min.
Switching	3- or 4-wires
Contact load	max. 2300 W
Standby operation	max. 100 mA at illuminated switches with glow lamps
Protection	IP20 / Class II / CE
Ambient temperature	-25°C to +50°C
Mounting type	DIN-rail

7. Article / Part-Nr.

Article	Part-Nr.
SCT1	92655