

Montageanvisning PERFECT-EMC-Förskruvning

E-nummer: 14 760 21-38, 14 732 21-39 och 14 750 65-68


Art.nr: 50.6xx M/Y/ES EMV / 50.6xx M/Y/ES EMV/L

Assemble PERFECT-EMC-Cable Gland

E-nummer: 14 760 21-38, 14 732 21-39 och 14 750 65-68

Art.no: 50.6xx M/Y/ES EMV / 50.6xx M/Y/ES EMV/L

Förskruvningens delar

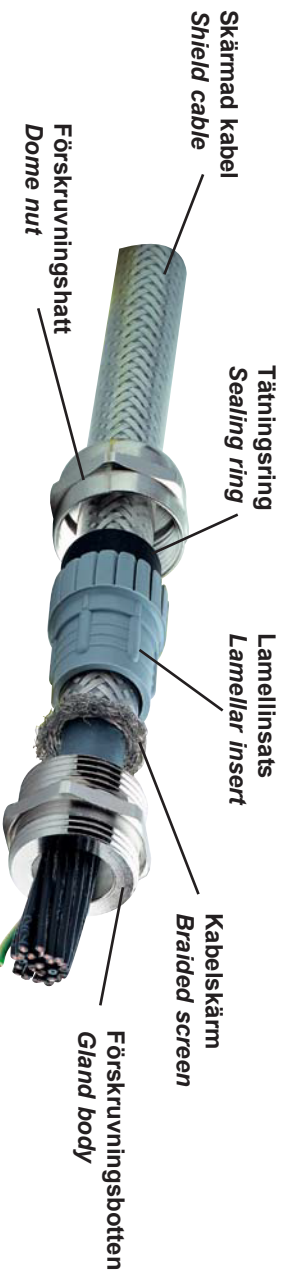

Individual parts

Montageanvisning

1. Skala upp ca 10-15 mm av kabelns mantel, beroende på kabelns diameter.
2. För kabeln genom förskruvningens hatt, tätningssring och lamellinsats.
3. Böj sedan kabelskärmen utåt i en rak vinkel (90°).
4. Kabelskärmen fäslas sedan mot lamellinsatsen och böjs 180° tillbaka.
5. Tryck upp förskruvningens bottendel till kabelskärmen och vrid sedan försiktigt bottendelen för att få kabelskärmen på plats.
6. Pressa lamellinsatsen och tätningssringen ner i förskruvningens botten och passa in anti-rotations elementet på rätt plats.
7. Dra sedan åt förskruvningens hatt ordentligt.

Assemble instructions

1. Cut off outer cable sheath and expose braided screen over a length of approx. 10-15 mm, depending on the cable diameter.
2. Push dome nut and lamellar insert with sealing ring onto the cable.
3. Bend braided screen outwards at a right angle (90°).
4. Fold braided screen towards outer sheath, i.e. by another 180°C.
5. Push gland base up to braided screen and turn briefly around both sides of the cable axis.
6. Push lamellar insert with sealing ring into gland base and snap anti-rotation element into place.
7. Firmly screw on dome nut.